


Champion Power Equipment, Inc.

MODEL #201240

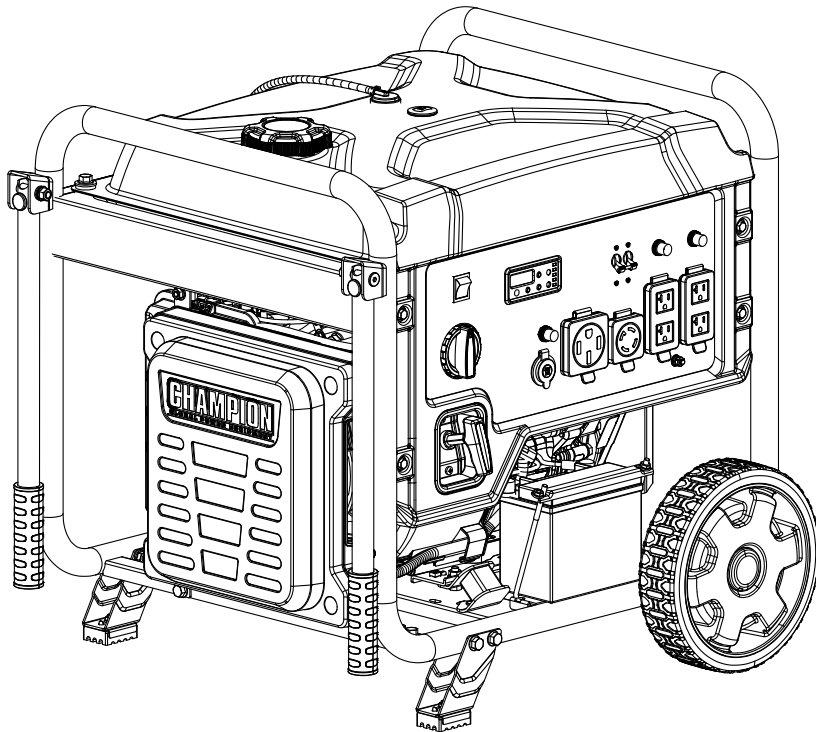

PARTS INFORMATION

10,000W ELECTRIC START OPEN FRAME INVERTER

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Inverter Parts Diagram	3
Inverter Parts List	4
Engine Parts Diagram	6
Engine Parts List	7
Cylinder Head Parts Diagram	9
Cylinder Head Parts List	10
Carburetor Parts Diagram	11
Carburetor Parts List	12
Fuel Tank Parts Diagram	13
Fuel Tank Parts List	14
Control Panel Parts Diagram	15
Control Panel Parts List	16
Frame Assembly Parts Diagram	17
Frame Assembly Parts List	18
Wiring Diagram	19

INVERTER PARTS DIAGRAM

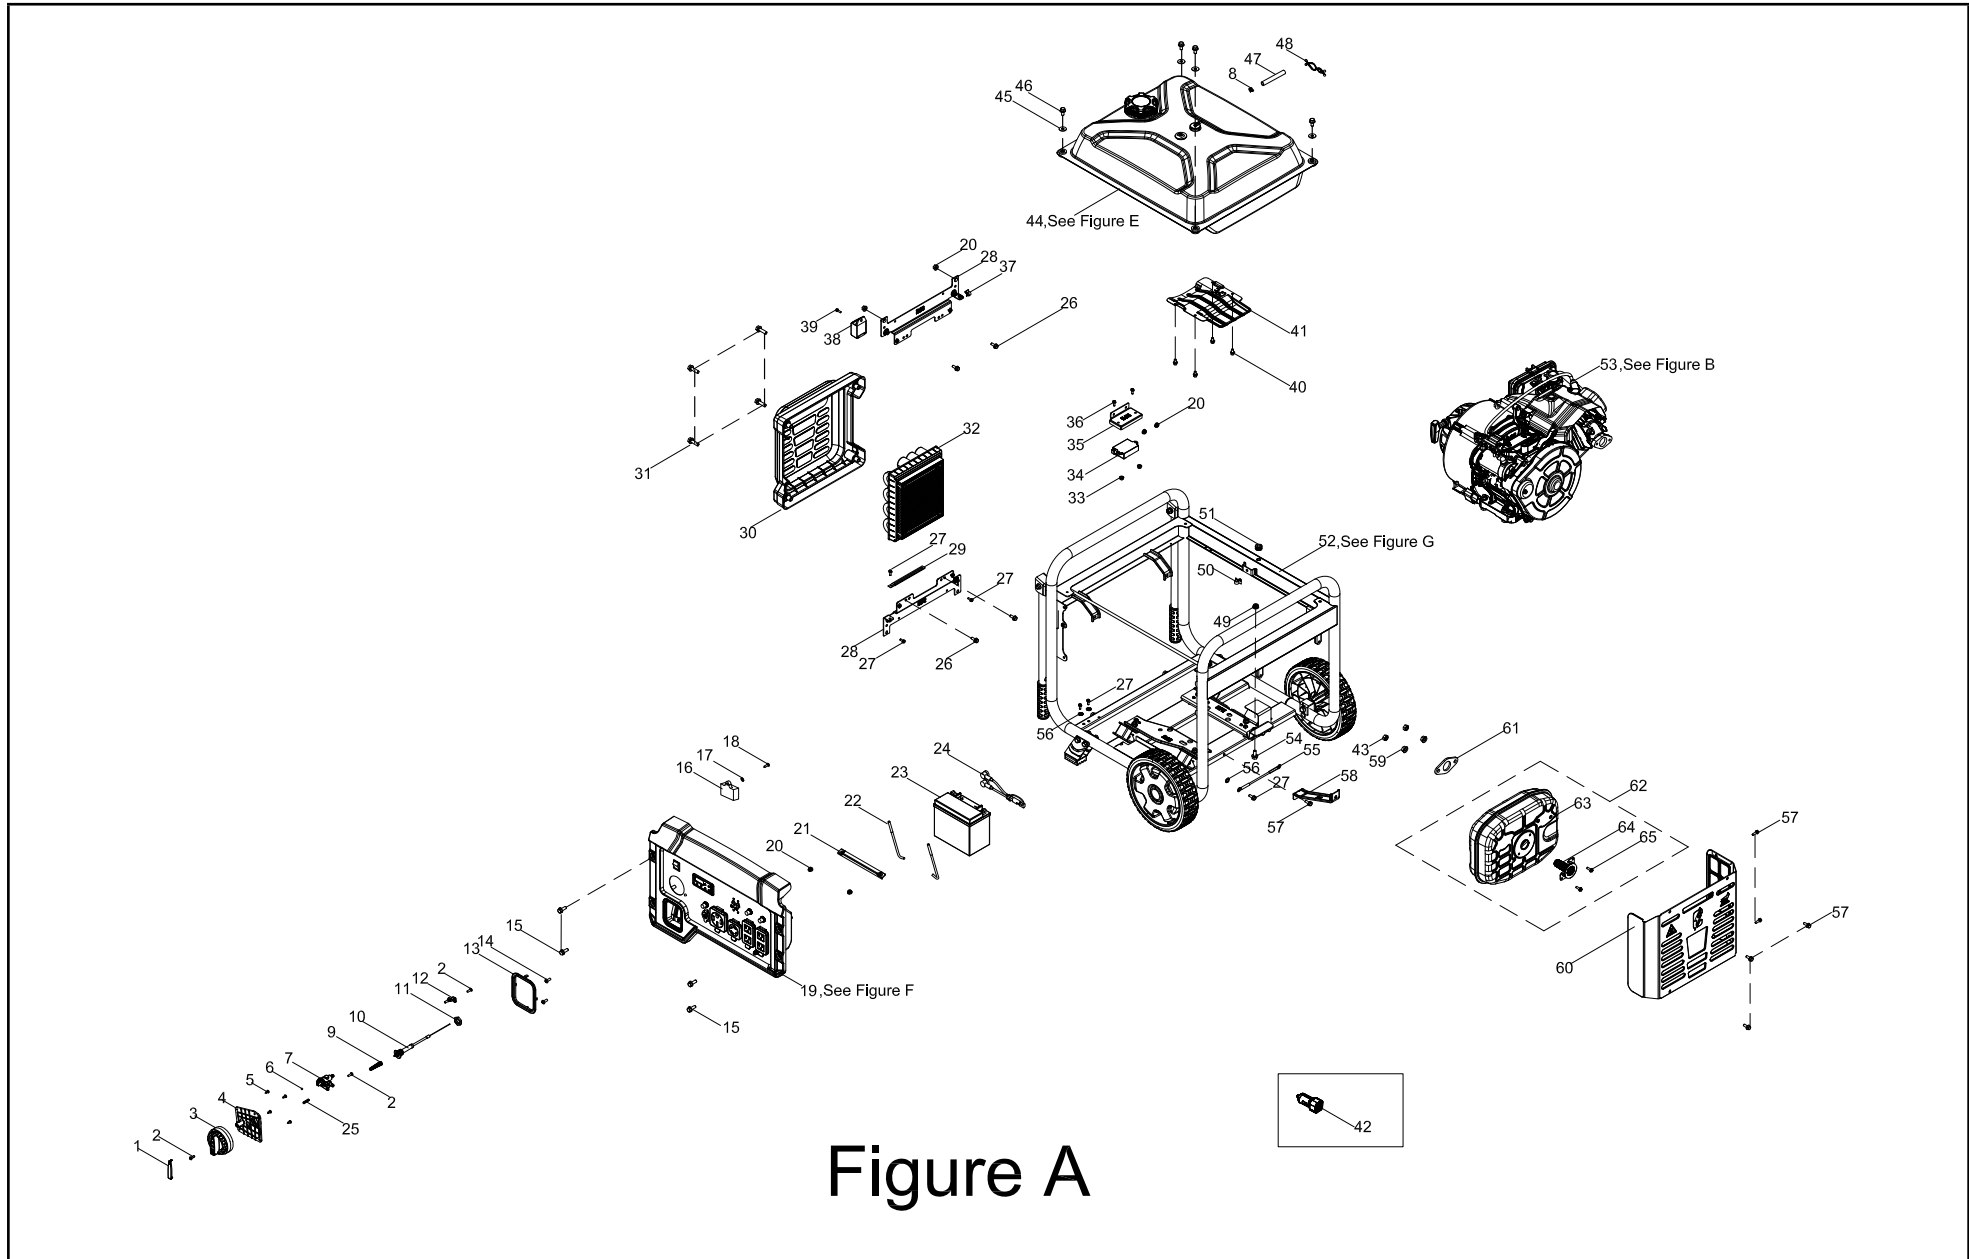


Figure A

INVERTER PARTS LIST

#	Part Number	Description	Qty.
1	100712234	Cover, Dial Knob	1
2	100139852-0001	Screw M4 x 12	3
3	100808915	Fuel Dial	1
4	100725109	Mounting Seat, Fuel Dial	1
5	100032963-0003	Self-tapping Screw ST3.5 x 13	4
6	100717043	Slide Block, Fuel Switch	1
7	100725107	Fuel Valve	1
8	100005148	Clamp Ø8	1
9	100779920	Spring	1
10	100766161	Choke Wire	1
11	100729582	Nut M16 x 1.5	1
12	100725113	Stopper, Fuel Dial	1
13	100725010	Deco Trim, Recoil	1
14	100010954-0001	Screw M5 x 12	2
15	100011266-0003	Flange Bolt M6 x 20	4
16	100813542	Charger	1
17	100010919-0002	Washer, Ø5	1
18	100032967-0002	Self-tapping Screw, ST4.2 x 16	1
19	100764887	Panel Assembly, See Figure F	1
20	100011452-0003	Flange Nut M6	6
21	100021372-0017	Pressing Plate, Battery	1
22	100021362-0003	Bolt	2
23	100021409	Battery	1
24	100750829	Battery Connecting Wire	1
25	100725111	Fuel Dial Spring	1
26	100011249-0003	Bolt, M5 x 12	4
27	100011261-0004	Flange Bolt, M6 x 12, GB5789	6
28	100764883	Inverter Mounting Bracket	2
29	100062546	Clip B	1
30	100764882	Protective Cover, Inverter Module	1

#	Part Number	Description	Qty.
31	100011269-0002	Flange Bolt M6 x 28	4
32	100766590	Inverter Module	1
33	100011451-0003	Flange Nut, M5	2
34	5.1830.022	CO Shutdown Module	1
35	100764867-0001	Install Lug	1
36	100011250-0002	Bolt, M5 x 14	2
37	100000671	Clip	1
38	100813543	Rectifier	1
39	100011262-0003	Bolt, M6 x 14	1
40	100055591-0006	Bolt, M6 x 12	4
41	100766688	Shroud	1
42	100806851	USB Adapter	1
43	100011422-0017	Nut M8	2
44	100818508	Fuel Tank Assembly, See Figure E	1
45	100010439-0001	Washer	4
46	100011268-0002	Flange Bolt M6 x 25	4
47	100766637	Tube, Carbon Canister	1
48	100714686	Clamp	1
49	100011464-0002	Nut, M8	1
50	100000667	Clamp Ø8 x 8	1
51	100009075	Sheath, Vent Tube	1
52	100730439	Frame Assembly - See Figure G	1
53	1ZC7DC071	Engine, See Figure B	1
54	100011230-0002	Bolt, M8 x 16	1
55	100822777	Earth Wire	1
56	100128826-0001	Washer, Ø6	3
57	100011262-0002	Bolt, M6 x 14, GB5789	6
58	100764888-0001	Muffler Bracket	1
59	100011472-0001	Flange Nut, M8, GB6187.1	2
60	100771735	Muffler Cover	1

#	Part Number	Description	Qty.
61	100717401	Gasket	1
62	100773119	Muffler Subassembly	1
63	100818596	Muffler	1
64	100154368	Spark Arrester Assembly	1
65	100762313-0001	Mounting Bolt, Spark Arrester	2

ENGINE PARTS DIAGRAM

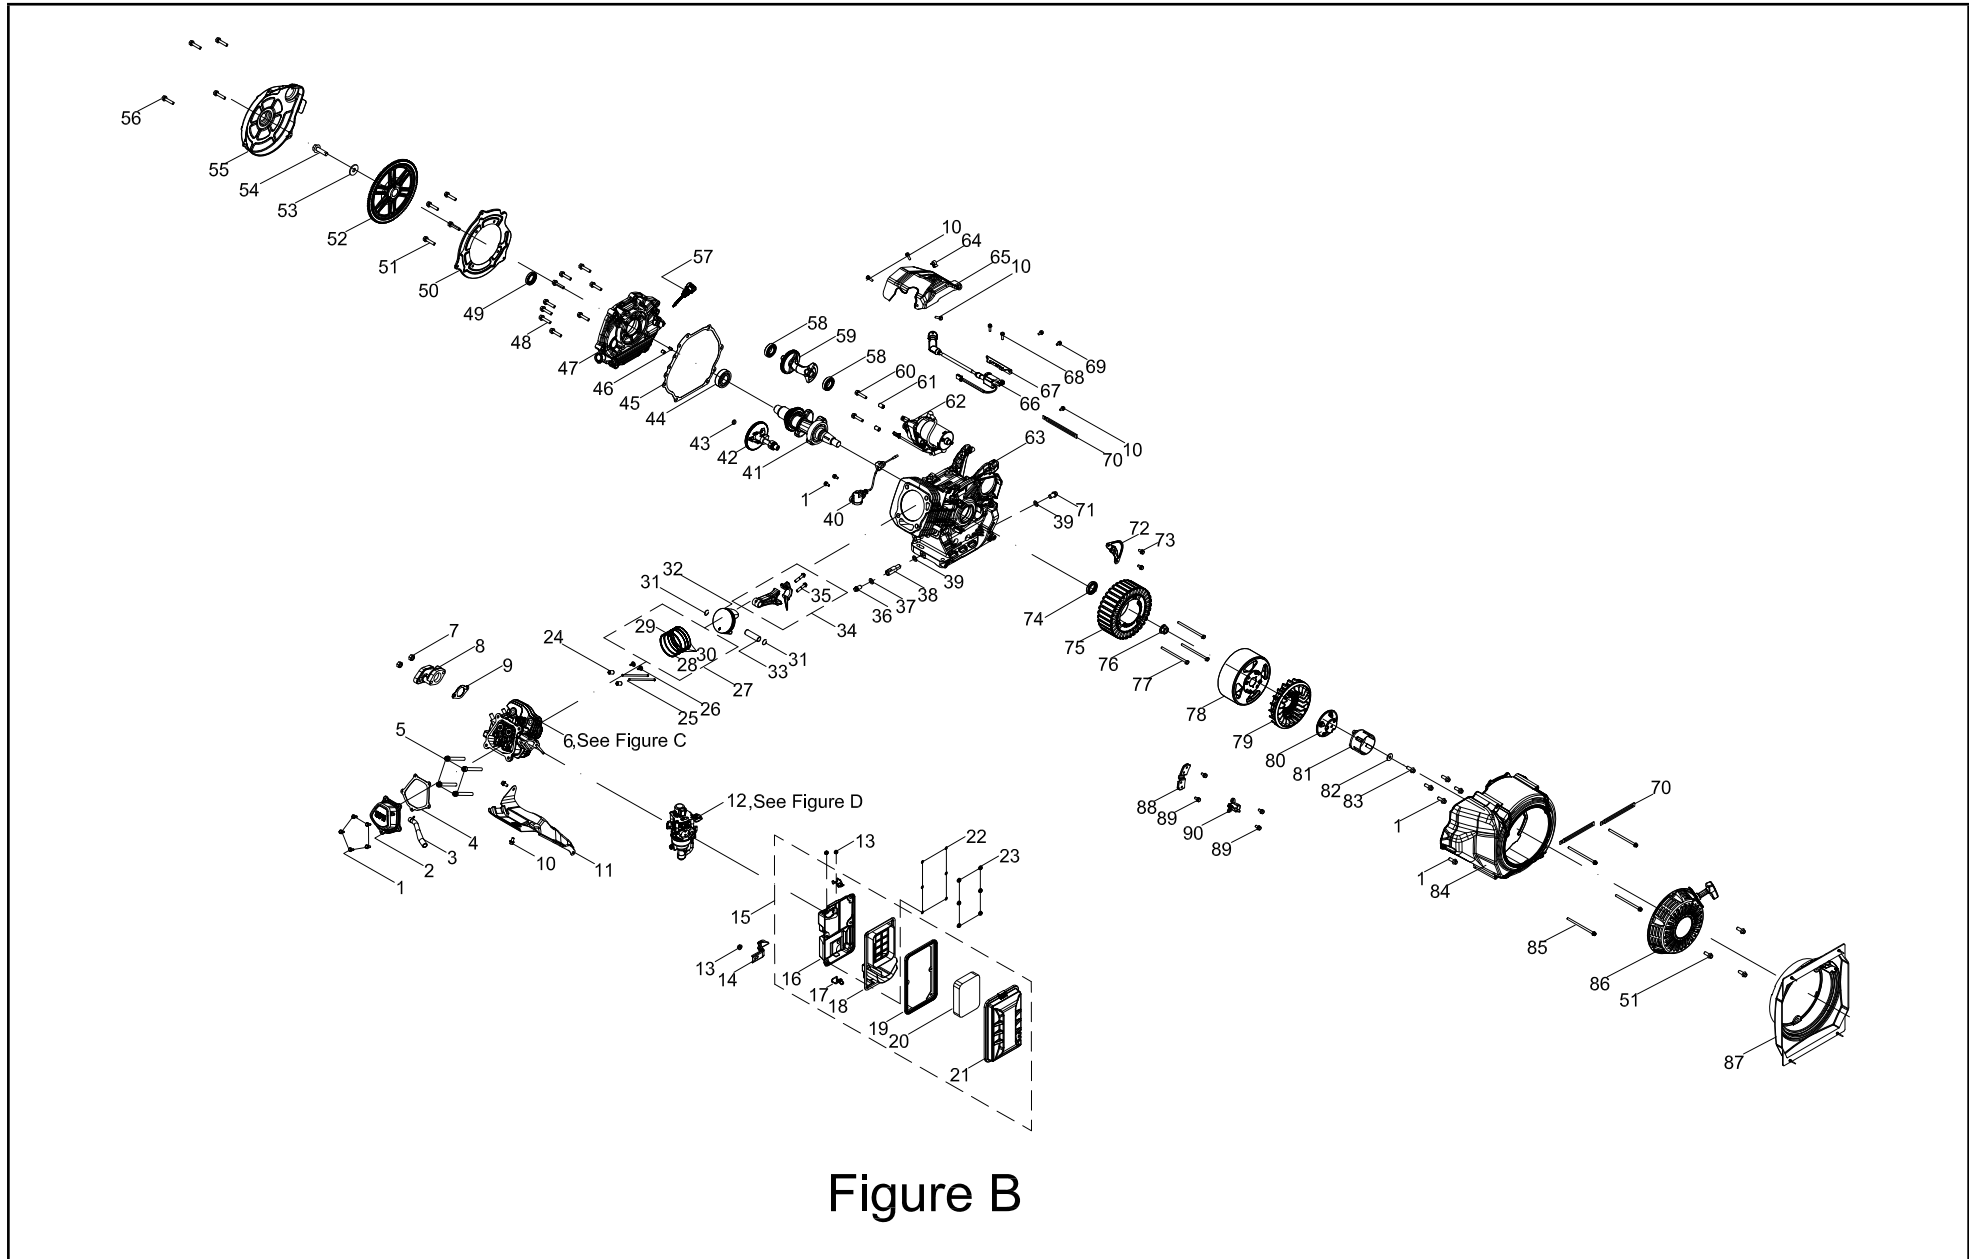


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100011264-0003	Flange Bolt M6 x 16, GB5789	12
2	100002337	Cylinder Head Cover	1
3	100819643	Breather Tube	1
4	100055922	Gasket, Cylinder Head Cover	1
5	100002470	Flange Bolt M10 x 1.25 x 87	4
6	100820318	Cylinder Head Assembly- See Figure C	1
7	100011422-0017	Nut, M8	2
8	100712648	Exhaust Pipe	1
9	100006941	Gasket, Muffler	1
10	100011261-0004	Flange Bolt M6 x 12, GB5789	6
11	100712968	Lower Shield	1
12	100820317	Carburetor Assembly- See Figure D	1
13	100011452-0003	Flange Nut M6	3
14	100712991	Bracket, Air Cleaner Support	1
15	100712978	Air Filter Assembly	1
16	100714346	Air Filter Base	1
17	100714345	Air Filter Clip	2
18	100714344	Air Filter Separator	1
19	100714343	Gasket, Air Filter Cover	1
20	100713882	Air Filter Element	1
21	100714350	Air Filter Cover	1
22	100010430	Washer Ø6 x 1 x Ø12	6
23	100011451-0003	Flange Nut M5	6
24	100010562	Dowel Pin Ø12 x 20	2
25	100149152	Push Rod	2
26	100149154	Lifter, Valve	2
27	100003265	Piston Ring Set	1
28	100003168	1st Piston Ring	1
29	100003210	2nd Piston Ring	1
30	100003295	Oil Ring	1

#	Part Number	Description	Qty.
31	100003225	Circlip, Wrist Pin	2
32	100030224	Piston	1
33	100003132	Wrist Pin	1
34	100719493	Connecting Rod Assembly	1
35	100003432	Bolt, Connecting Rod	2
36	100010272	Drain Bolt	1
37	100010459	Washer	1
38	100819645	Drain Tube	1
39	100010467	Washer Ø12 x 2 x Ø20	2
40	100010034	Oil Level Sensor	1
41	100717411	Crankshaft	1
42	100711980	Camshaft	1
43	100010521-0001	Washer Ø16.2 x 0.3 x Ø24	1
44	100010789	Bearing TM6207E - P64	1
45	100158287	Gasket, Crankcase Cover	1
46	100010549	Dowel Pin Ø8 x 12	2
47	100781809	Cover, Crankcase	1
48	100011323-0001	Flange Bolt M8 x 38	9
49	100017653	Oil Seal Ø35 x Ø52 x 7, Spiral Grain	1
50	100716081	Guard, Rear	1
51	100011260-0005	Bolt, M6x10	7
52	100716082	Gear Ring	1
53	100757994	Washer	1
54	100757973	Bolt M12 x 35	1
55	100716083	Guard, Front	1
56	100011548-0002	Bolt, M8x12	4
57	100749771-0003	Oil Dipstick Assembly	1
58	100010742	Bearing 6202 - P63	2
59	100150211	Balance Shaft	1
60	100720810-0001	Flange Bolt M8 x 50	2

#	Part Number	Description	Qty.
61	100010556	Pin	2
62	100777988	Starter	1
63	100759251	Crankcase	1
64	100000671	Clip	1
65	100720817	Air Guide, Engine Fan	1
66	100777985	Ignition Coil	1
67	100712970	Ignition Module Bracket	1
68	100011265-0003	Bolt, M6 x 18	2
69	100011262-0003	Bolt, M6 x 14	2
70	100062546	Clip B	3
71	100010275	Drain Bolt, M12 x 1.5 x 15	1
72	100712964	Pressing Plate	1
73	100031968-0002	Flange Bolt M6 x 20	2
74	100017649	Oil Seal Ø35 x Ø52 x 7	1
75	100776898	Stator Assembly	1
76	100011460-0001	Nut, M16 x 1.5	1
77	100031964-0002	Bolt, M8 x 70	3
78	100813604	Rotor Assembly	1
79	100712966	Cooling Fan	1
80	100760669	Starter Cup	1
81	100712965	Starter Pulley	1
82	100010899-0002	Washer	1
83	100011232-0001	Bolt, M8 x 25	1
84	100766687	Blower Housing	1
85	100011284-0003	Bolt, M6 x 100	4
86	100773152-0001	Recoil Starter	1
87	100769283	Inverter Connecting Cover	1
88	100712963	Trigger Support	1
89	100055591-0006	Bolt, M6 x 12	4
90	100777986	Trigger	1

CYLINDER HEAD PARTS DIAGRAM

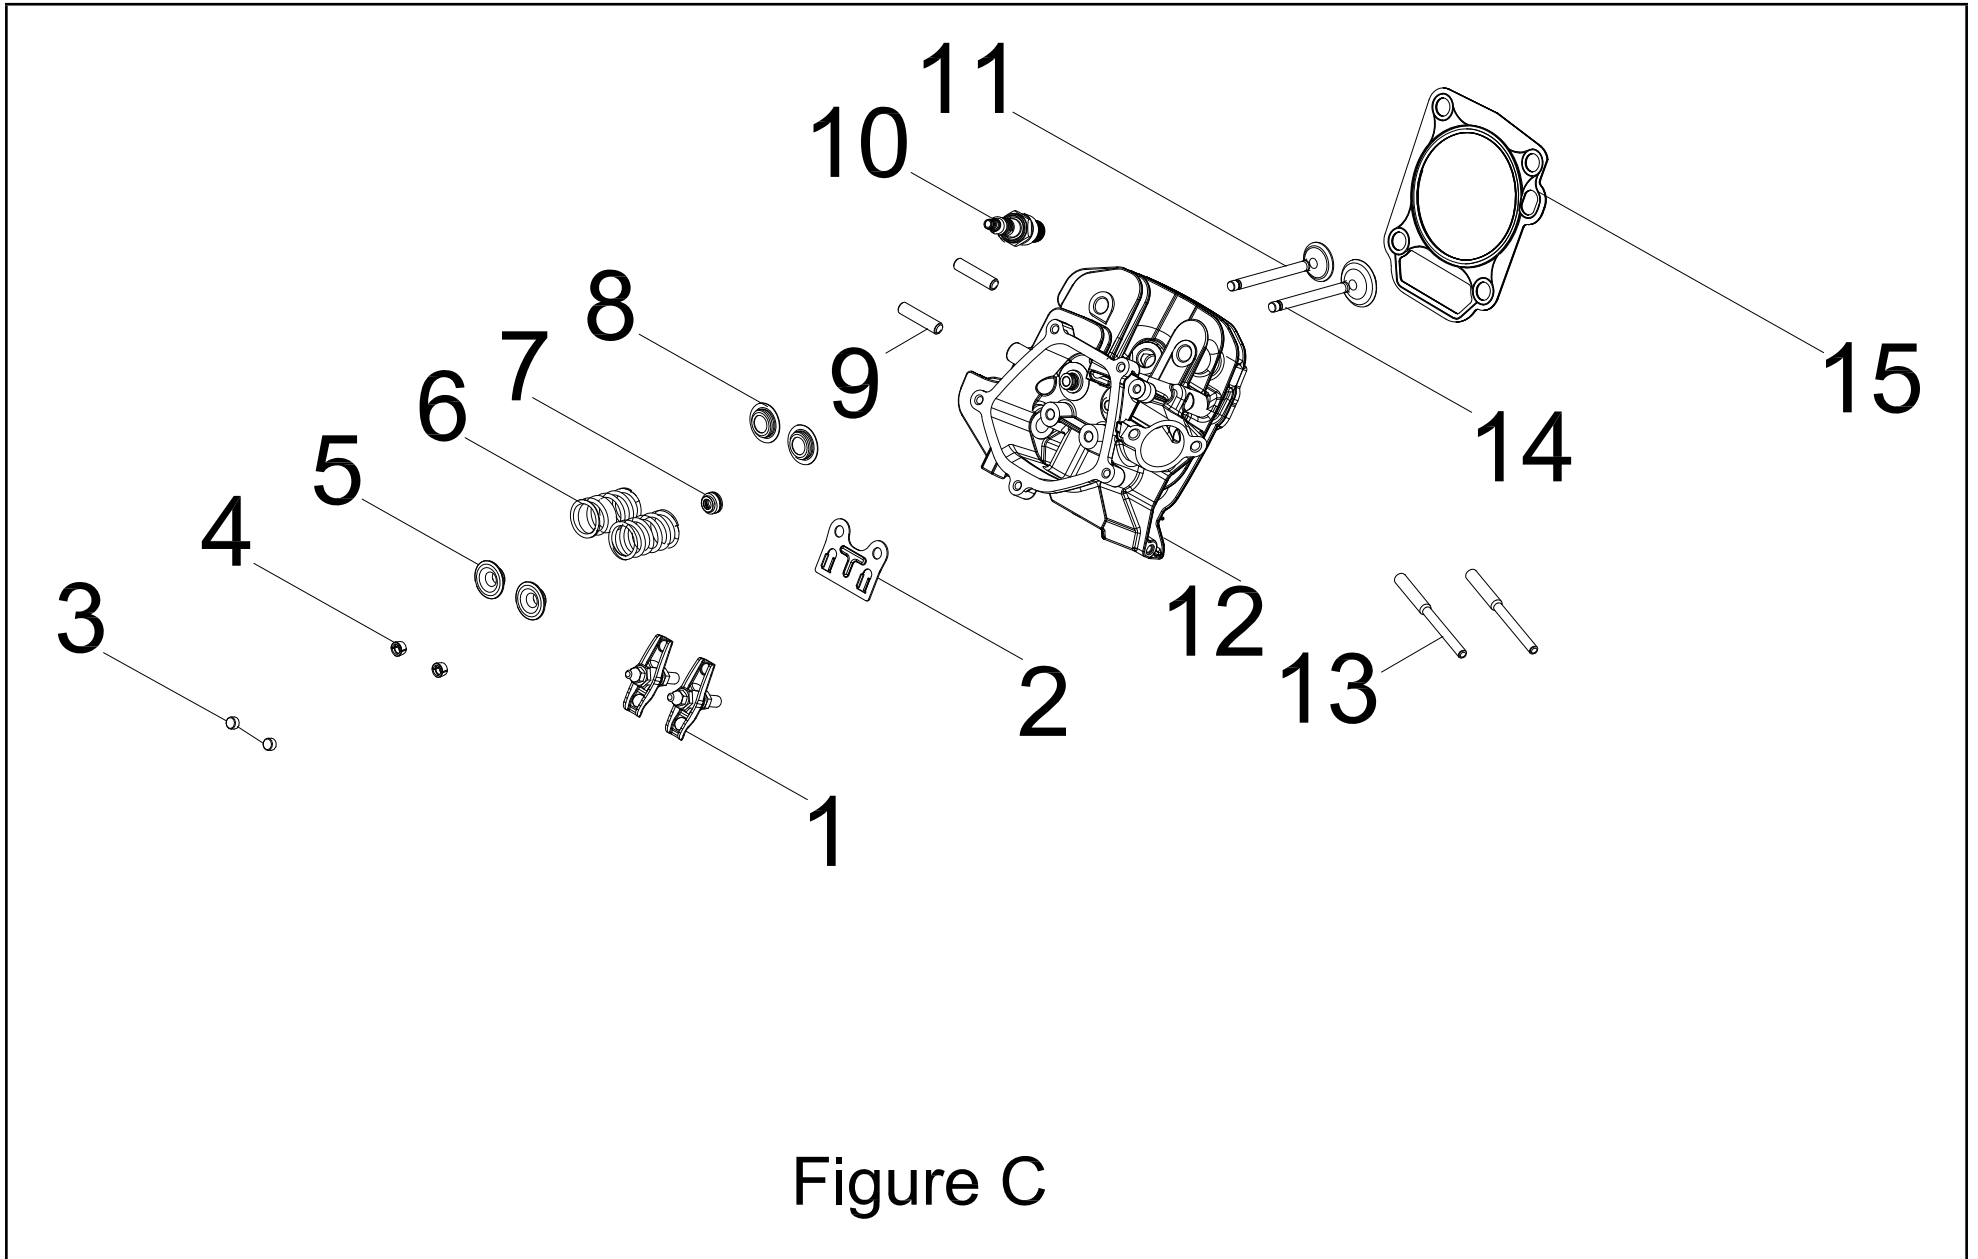


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	100149155	Rocker Arm Assembly	2
2	100748373	Guide Plate, Push Rod	1
3	100004589	Retainer, Valve	2
4	100004576	Valve Collet	4
5	100004516	Valve Spring Seat, Upper	2
6	100067633	Spring, Valve	2
7	100004602	Oil Seal, Intake Valve	1
8	100004575	Valve Spring Seat, Lower	2
9	100717416	Stud Bolt M8 x 57	2
10	100009378	Spark Plug F6RTC	1
11	100719490	Exhaust Valve	1
12	100773180	Cylinder Head	1
13	100121829	Stud Bolt M6-8 x 123	2
14	100719491	Intake Valve	1
15	100150209	Gasket, Cylinder Head	1

CARBURETOR PARTS DIAGRAM

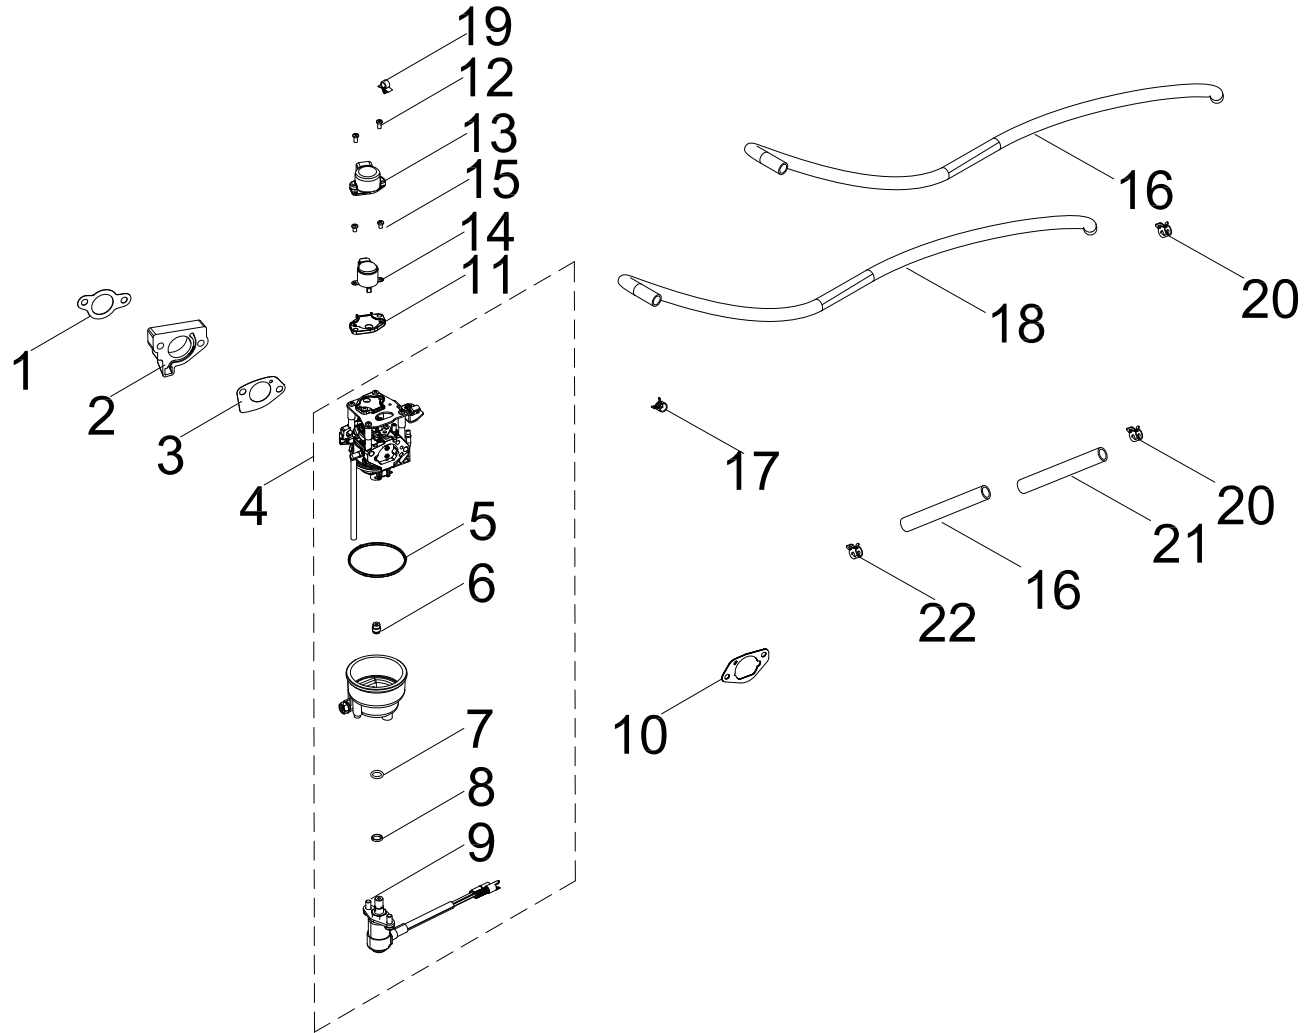


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	100717412	Gasket, Insulator	1
2	100712967	Insulator, Carburetor	1
3	100717417	Gasket, Carburetor	1
4	100776830	Carburetor	1
5	100085766	Fuel Bowl O-Ring	1
6	100727684	Main Jet Standard (110)	1
	100155681	Main Jet Altitude 1000-3000m (108)	/
7	100134226	O-Ring, Solenoid Valve Base	1
8	100134227	O-Ring, Solenoid Valve	1
9	100778595	Solenoid Valve	1
10	100717415	Gasket, Air Filter Base	1
11	100781214	Insulating Board	1
12	100060638-0001	Screw M4 x 8	2
13	100074044-0001	Protection Cover	1
14	100777984	Stepping Motor	1
15	100031809-0004	Screw M3 x 6	2
16	100817404	Fuel Hose Jacket	2
17	100005149	Clamp Ø7.5	1
18	100781478	Fuel Tube	1
19	100052808	Clamp	1
20	100005148	Clamp Ø8	2
21	100776894	Fuel Tube 1	1
22	100005138	Clamp Ø9.5	1

FUEL TANK PARTS DIAGRAM

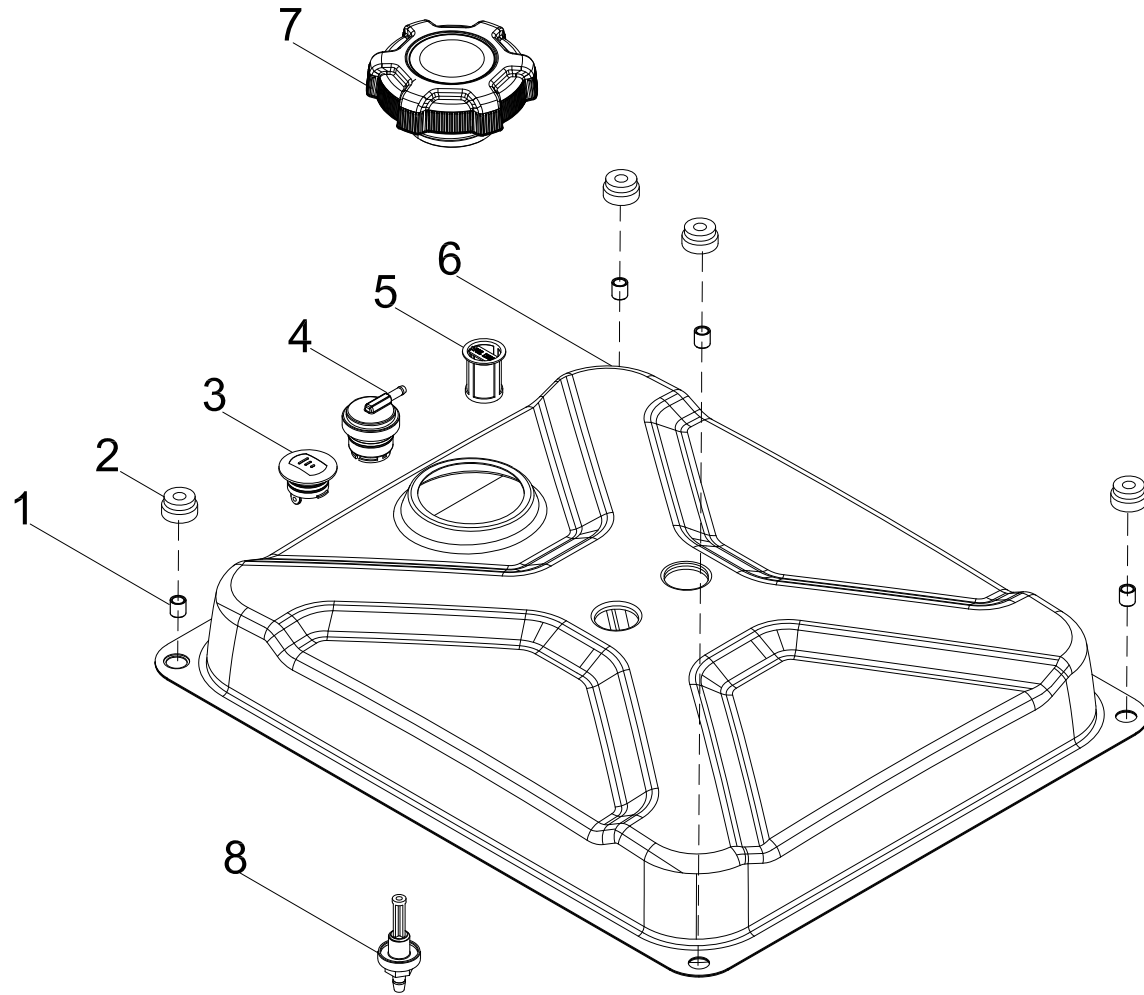


Figure E

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	100021118	Bushing	4
2	100032369	Vibration Mounting, Fuel Tank	4
3	100772687	Fuel Gauge	1
4	100720340	Reversal Valve	1
5	100098838	Fuel Filter Assembly	1
6	100764890-0001	Fuel Tank	1
7	100142004	Fuel Tank Cap	1
8	100814188	Fitting, Fuel Tank	1

CONTROL PANEL PARTS DIAGRAM

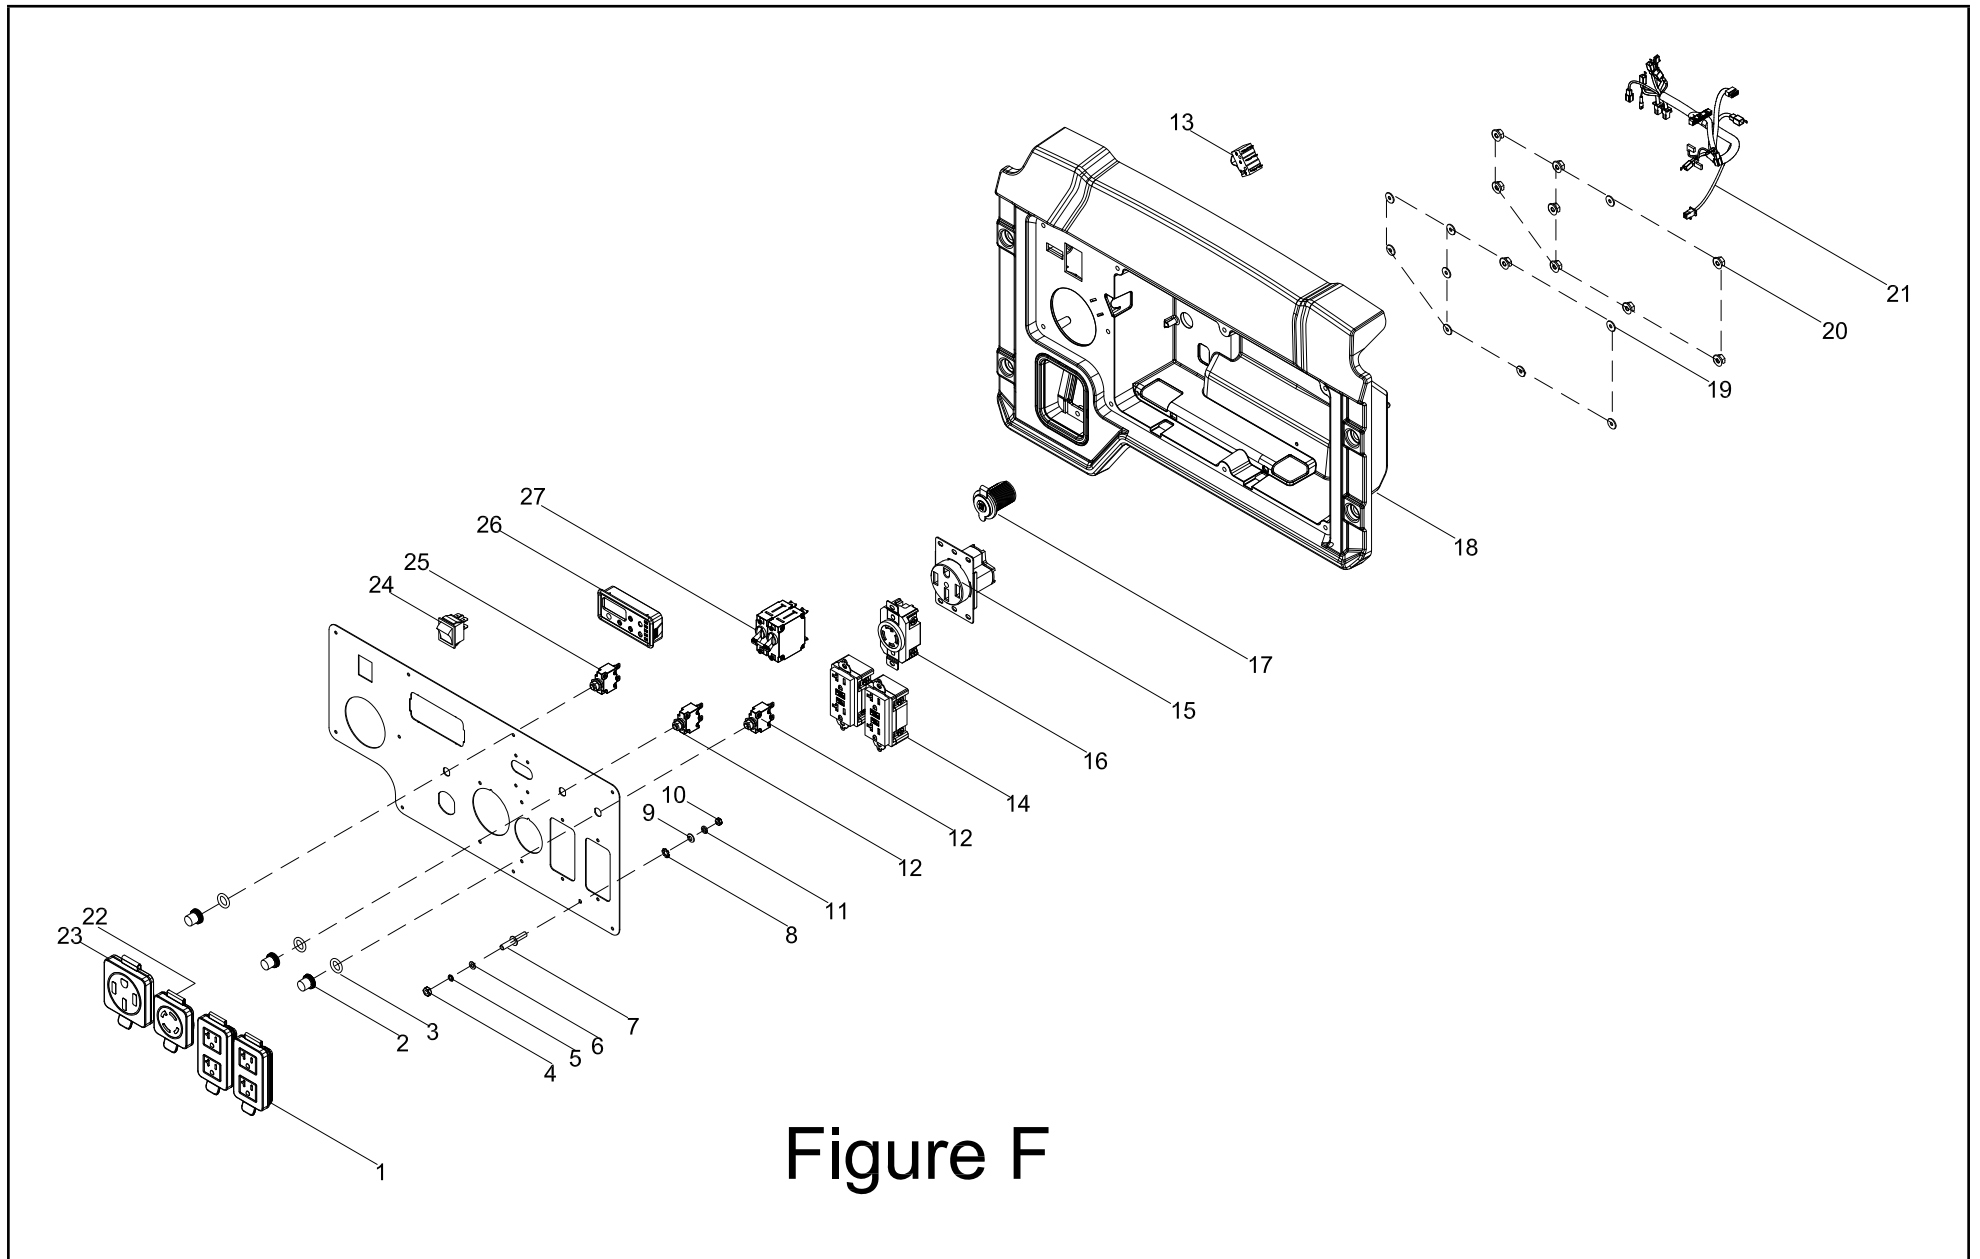


Figure F

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	100731574	Receptacle Cover GFCI 5-20R, Duplex	2
2	100120180	Cover, Circuit Breaker	3
3	100031552	O-Ring	3
4	100011421-0002	Flange Nut M6, GB6170	1
5	100010886-0002	Spring Washer Ø6	1
6	100010910-0002	Washer Ø6	1
7	100092320-0002	Grounding Stud	1
8	100011025-0001	Lock Washer Ø6, Toothed	1
9	100010919-0001	Washer Ø5	1
10	100011419-0003	Flange Nut M5	1
11	100010885-0003	Spring Washer Ø5	1
12	100019754	20 Amp Circuit Breaker, Push Button	2
13	100778418	Microswitch Assembly	1
14	100052461-0001	Receptacle GFCI 5-20R, Duplex	2
15	100087040	Receptacle 14-50R	1
16	100020023	Receptacle L14-30R	1
17	100019782	Receptacle, 12 VDC	1
18	100764881	Control Panel Housing	1
19	100010426	Washer	9
20	100011446-0001	Flange Nut M4	9
21	100778417	Wire Harness Assembly	1
22	100731571	Receptacle Cover, L14-30R	1
23	100731570	Receptacle Cover, 14-50R	1
24	100714233	Stop Switch	1
25	100057719	8Amp Circuit Breaker, Push Button	1
26	100781222	Intelligauge	1
27	100019957	30 Amp Circuit Breaker	1

FRAME ASSEMBLY PARTS DIAGRAM

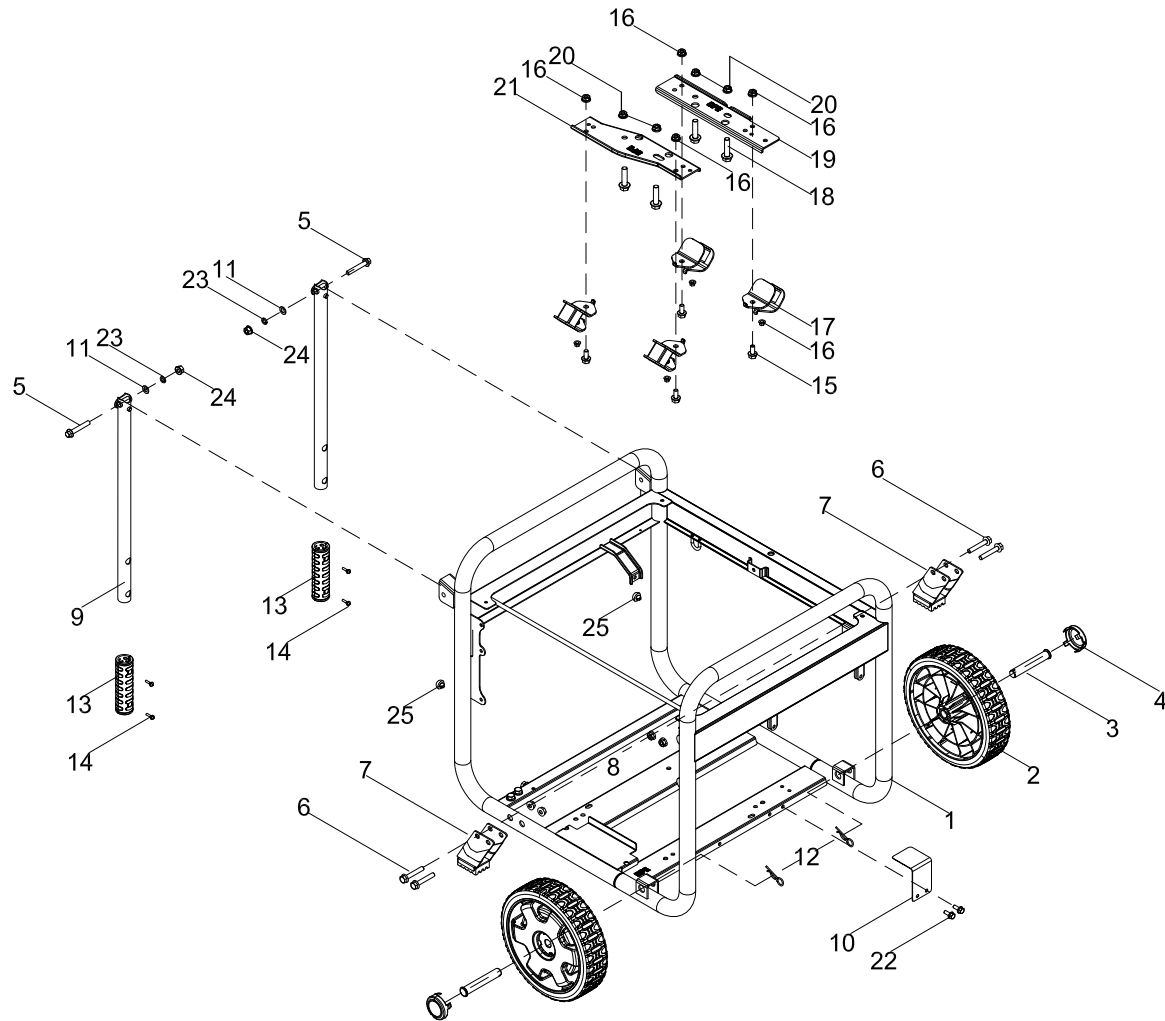


Figure G

FRAME ASSEMBLY PARTS LIST

#	Part Number	Description	Qty.
1	100764859-0001	Frame	1
2	100163346-0001	Wheel	2
3	100011063-0001	Roll Pin	2
4	100712243-0001	Tire Cover, Yellow	2
5	100824851	Bolt, M8 x 50	2
6	100011330-0001	Bolt, M8 x 48	4
7	100163347-0001	Support Base	2
8	100011453-0002	Nut, M8	4
9	100823418-0002	Push Handle	2
10	100823417-0001	Heat Shield	1
11	100010911-0004	Washer	2
12	100023414-0002	Circlip	2
13	100716888	Handle Sheath	2
14	100095857-0005	Bolt, M4 x 18	4
15	100011312-0001	Bolt, M8 x 18	4
16	100011464-0002	Nut, M8	8
17	100817406	Damping Pad	4
18	100011381-0002	Bolt, M10 x 1.25 x 40	4
19	100764885-0001	Engine Mounting Plate	1
20	100011456-0003	Nut, M10 x 1.25	4
21	100764886-0001	Engine Mounting Plate	1
22	100011262-0002	Bolt, M6 x 14, GB5789	2
23	100010887-0004	Spring Washer	2
24	100011472-0001	Flange Nut, M8, GB6187.1	2
25	100731043	Cushion Pad	2

WIRING DIAGRAM

